



18 PARTS DRAWING
TKD505SPT

Part No. 890316 Page 10 of 12 Form No. F082195D

Item No.	19 PARTS	Description	TKD505SPT	
1	DEBRIS BAG TURF		Part No. 890307	Qty.
3	THROTTLE ASSEME TAMPER	BLY (INCL. 1 ea items 4, 10)	900514-04 890229	1
4	NUT LOCK (1/4 - 20	)	*8160001	7
5	SCREW CAP ( 1/4 -		*8041008	6
6		items 4(6), 5(4), 11(2), 75(2) & 76, 99)	900057	1
7	AXLE REAR - FRAM		900956	1
8	SCREW HANDLE 5/	16 - 18 x 2-1/4	900547	2
9	CLAMP CABLE PLASTIC 1"		900813	2
10	SCREW CAP 1/4 - 20 x 2 1/4		*8041011	1
11			900039	2
12	DOOR EXHAUST ASS'Y (incl. item 62 ) 890148			1
13	SCREW CAP #10 - 24 x 5/8 *8059135			7
14 15	NUT LOCK #10 NC	SCREW CAP #10 - 24 x 5/8		7
16	WASHER #10 FC		*8164005 *8171001	2
17	WASHER LOCK 3/8	INT	*8180011	2
18		BRACKET - HEIGHT ADJUSTMENT 900932 1		
19				-
20	SPRING		900136	1
21	TIRE - ONLY (PER A		900659	1
22	PIN - HAIR COTTER		900471	1
23	ROD SHORT HEIGHT		890110	1
24	BOLT - CARRIAGE 5		*8024050	4
25	WASHER - FLAT 5/1		*8172008	12
26 27	NUT LOCK 5/16 - 18 HANDLE LOWER KD		*8160002	5
28	PLATE HANDLE SUP		900041 900933	1
29	LABEL DANGER CU	-	400424	2
30	WASHER FLAT CUT		*8171003	2
31		6 X 2 1/2 WASHER FACE	900564	2
32	WASHER HUB CAP		900927	4
33				
34		(incl. items 21) TREADED	900760	2
35	WASHER 0.75 "C"		900997	1-0
36				
37	LABEL EAR EYE BR	EATHING	890254	1
38	DI ATE DE AGE DE AG		000100	
39 40	PLATE BRACE REAF		890189	2
41	SCREW CAP 1/4 - 2 SPACER	U X 1/2	*8041002 900926	4
42	SCREW SELF TAPP	ING 10 - 24 x 1/2	*8123086	2
43		E ASS'Y (incl. one of items 29, 44, 42, 55, 64)	900966	1
44	PLUG	12 AOO 1 (IIIOI: OTIC OT IICITIS 25, 44, 42, 55, 64)	900146	1
45	LABEL OIL CHAIN		830502	1
46	BLADE CHIPPER		890101	1
47		ncl. items 46, 49, 50, 51, 59, 65, 66, 67 )	890208-S	1
48	LABEL CHIPPER		890152	1
49	KEY 3/16 SQ. x 1.25		9201080	1
50	WASHER LOCK 3/8		400502	1
51		1 x 2" (HARDENED) (TORQUE 50 FT-LBS) (68 N·m)		1
52 53	ENGINE 5.5 H.P. TE	cl. items 12, 14, 15, 16, 37, 100)	890202 890228	1
54	NUT LOCK 3/8 16	COMSETT FREIMIER	*8160003	2
55	ROD BUMPER		900939	1
56	TOD BOWN LIK		000000	<u> </u>
57	CAP HUB		900486	4
58	WASHER FLAT 1/2	SAE	*8172011	4
59		D. 5/16 - 18 x 3/4 GR. 8	890103	2
60	HT ADJUST ASSY		890326	1
61	PIN COTTER 3/32 x		*8197016	5
62	LABEL DANGER FLY		810736	1
63	CHARD FOAM INSE		400268	1
64 65	GUARD FOAM INSER NUT KEPS 5/16 -18	M	900977 890104	2
66	WASHER SHIM 0.06	0" (1.52mm)	890130	0-1
67	WASHER SHIM 0.02		890131	0-1
68		incl. items 14, 15, 29, 69, 70, 71, 72)	890188	1
69	GUARD FLAPPER	, ,,,,,,	890119	2
70	PLATE FLAPPER EN	TRANCE	890127	2
71		18 x 1/2 HEX HD. GR. 5	890149	9
72	WASHER LOCK CON		890150	9
73	KNOB WING 5/16 - 1		890108	2
74	NUT LOCK 5/16 - 18	THIN HT.	*8161041	2
75	GRIP HANDLE	1000	400570	2
76	BRACKET LOPPER	LUUP	890167	1
77			900640	1
78				
79 80				_
81	SCREW CAP 1/4 - 2	0 x 3/4	*8041004	2
82	JOINEVV ON 1/4 - 2	5 A 5/ /	5541504	<del>-</del>
83	CONNECTOR QUICK		890176	1
84	WASHER 5/16 EXT.		*8181008	1
85	CABLE ASS'Y CLUTO	CH	900207	1
l				

\* Denotes standard hardware item that may be purchased locally.



			_
Item No.	Description	TKD505SPT Part No.	Qty.
86	WHEEL WITH SPROCKET ASS'Y CAST (21, 94, 95, 96)	890242	2
87	CHAIN 52 PITCH	890239	2
88	CHAIN 40 PITCH	900323	1
89	WASHER FLAT 5/16 (3/8 ID x 7/8 x 1/16)	*8171003	4
90	BOLT CARRIAGE 5/16 -18 x 3/4	*8024039	4
91	WASHER SPRING LOCK 5/16	*8177011	4
92	NUT REGULAR 5/16-18	*8142002	5
93	JACKSHAFT	900320	1
94	SPROCKET (PER ASSEMBLY) (SIZE # 65A26) 26 TEETH	890238	1
95	SCREW SELF TAP 1/4-14 x 3/4 (PER ASSEMBLY)	800505	5
96	WASHER LOCK EXTERNAL TOOTH (PER ASSEMBLY)	*8181007	5
97	JACKSHAFT ASS'Y (INCLUDE. 93, 101, 102, 107, 108, 109)	890197	1
98	SHIELD MUFFLER TKDSP	890190	1
99	LABEL CLUTCH	830503	1
100	LABEL-WARNING GUARDS	900327	1
101	BEARING PLATE	900317	2
102	BEARING BALL (WITH SNAP RING)	900321	2
103	WASHER LOCK 1/4	*8177010	2
104	ROD BAIL CLUTCH	900970	1
105	BAR BRACE HANDLE	900768	1
106	SCREW CAP 5/16-18 x 3/4	*8041026	1
107	SPROCKET - 17 TOOTH	900303	1
108	SPROCKET - 8 TOOTH	900302	2
109	ROLL PIN 3/16 DIA. x 1 1/4 LG.	*8195166	4
110	LOCKNUT 5/16 - 18 FLANGE	850164	5
111			
112	BRACKET CONTROL ASS'Y (INCL. 113, 114, 115)	900221	1
113	SPRING	900136	1
114	ROLL PIN 1/8" DIA. x 1 1/4 LG.	*9195106	1
115	ROD CLUTCH	900208	1
116	SCREW CAP 1/4-20 x 1" LG.	*8041006	2
117	WASHER 1/4" FLAT (5/16 ID x 3/4 OD x 1/16)	*8171002	6
118	GUARD CHAIN ASS'Y TKDSP	890195	1
119	CLIP-CLUTCH CABLE	900999	1
120	PLATE BRACE HT. ADJ. KD / TKD	900756	1
121	CLUTCH DOUBLE RELEASE	900307	1
122	WASHER FENDER 5/16	*8172020	1
123	LABEL READ OWNER'S MANUAL	890301	1

\* Denotes standard hardware item that may be purchased locally.


20 TROUBLES	HOOTING Before Requesting Service I	Before Requesting Service Review These Suggestions	
Problem	Possible Cause	Solution	
Will not vacuum or has poor	Dirty debris bag. Nozzle height set too high or too low. Hose kit cap	Clean debris bag. Shake bag clean or wash. Adjust nozzle height.	

Will not vacuum or has poor vacuum performance.	Dirty debris bag. Nozzle height set too high or too low. Hose kit cap missing. Clogged nozzle or exhaust. Excessive quantity of debris.	Clean debris bag. Shake bag clean or wash. Adjust nozzle height. Check for hose kit cap. Unclog nozzle or exhaust (see page 5). Allow air to feed with debris.	
Poor chipping performance.	Extremely hard wood. Dull or damaged chipper blade.	Avoid extremely hard wood. Sharpen or replace chipper blade (see page 8).	
Engine stalls or labors when chipping.	Feeding branches into chipper too rapidly. Engine service may be required.	Feed branches at a slower rate. Service engine.	
Abnormal vibration.	Loose or out of balance impeller or loose engine.	Check impeller and replace if required. Check Engine.	
Engine will not start.	Throttle in off position. Out of gasoline. Bad or old gasoline. Spark Plug wire disconnected. Dirty air cleaner.	Check stop switches, throttle, and gasoline. Connect spark plug wire. Clean or replace air cleaner. Or contact a qualified service person.	
No self propelling.	Operator's bail not releasing clutch. Broken or out of adjustment clutch cable. Worn or broken clutch assembly. Bracket control assembly (item 112) out of adjustment.	Adjust clutch cable. Adjust bracket control assembly. Replace any worn or damaged or malfunctioning parts.	
Self propelled drive will not release.	Clutch cable out of adjustment. Clutch not lubricated and is locked- up.	Adjust clutch cable. See page 9 Clutch Adjustment. Oil clutch.	
Engine is locked, will not pull over.	Debris locked in chipper blade, hopper or inside impeller. Engine problem.	See page 5, Clearing a clogged chipper hopper. Contact an engine servicing dealer for engine problems.	

22

Engine Service and Warranty

Contact your nearest engine manufacturer's authorized servicing dealer.

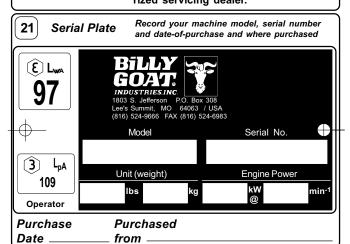

## WARRANTY PROCEDURE

Please fill in the WARRANTY CARD and send the upper part to Billy Goat. The WARRANTY terms are stated on the lower part which remains with the user. Whenever a Billy Goat Machine is faulty due to a defect in material and / or workmanship, the owner should make a warranty claim as follows:

The Machine should be taken to the dealer from whom it was purchased or to an authorized Billy Goat dealer.

The owner should present the remaining half of the Warranty Registration Card, or, if this is not available, the invoice or receipt.

The Warranty Claim will be filled in by the authorized Billy Goat Dealer, who will send it with the faulty part to Billy Goat headquarters.

The Quality / Service department at Billy Goat headquarters will study the claim and parts and will notify their conclusions.

The decision by the Quality / Service department at Billy Goat headquarters to approve or reject a Warranty claim is final and binding

Note: To process a Warranty Claim, it is necessary to quote the Model & Serial number who are printed on the Billy Goat Serial Plate.



**BILLY GOAT INDUSTRIES INC.**P.O. BOX 308 (1803 S JEFFERSON) LEE'S SUMMIT, MO 64063 / USA PHONE: 816-524-9666 FAX: 816-524-6983